

17964

BLACK SPLIT TOP QUICKBOLT WITH UMBRELLA WASHER FOR METAL ROOFS



A DIVISION OF QUICKSCREWS INTERNATIONAL CORP

TABLE OF CONTENTS

3

SPEC SHEET

QTY & MEASUREMENT INFORMATION

6

INSTALLATION INSTRUCTIONS

STEP-BY-STEP-INSTALLATION GUIDE




SPEC SHEET

Part #	Box Quantity
17964	5.25" Bolts (25); Umbrella Washer (25); Low Profile Black Split L-Foot (25); Flange Nuts (25)



Part #17664


5/16-18 X 5.25"
304 Stainless Steel
Removable Hanger Bolts

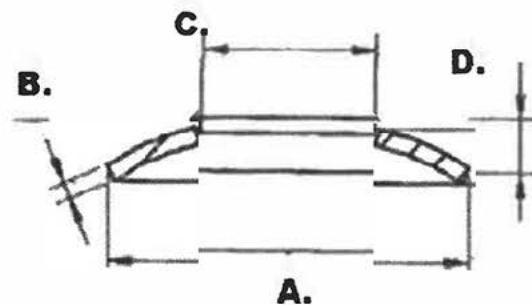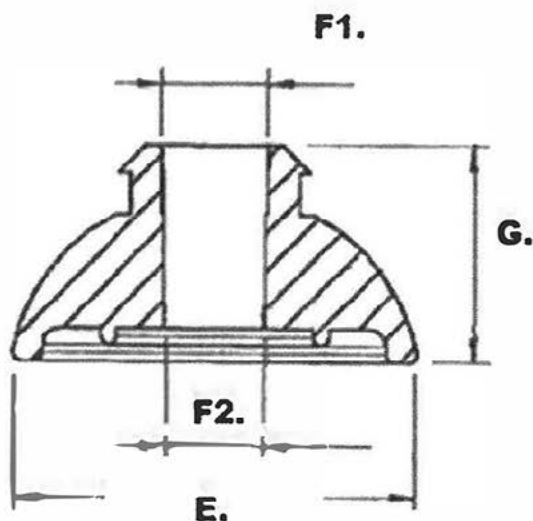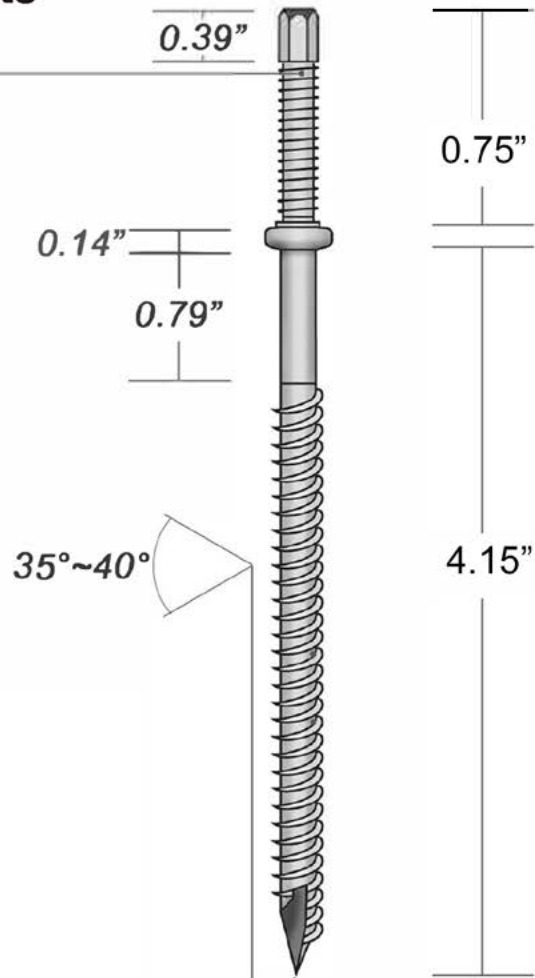

PN# 16261
Umbrella Washer 8mm x 25mm



Part # 17894

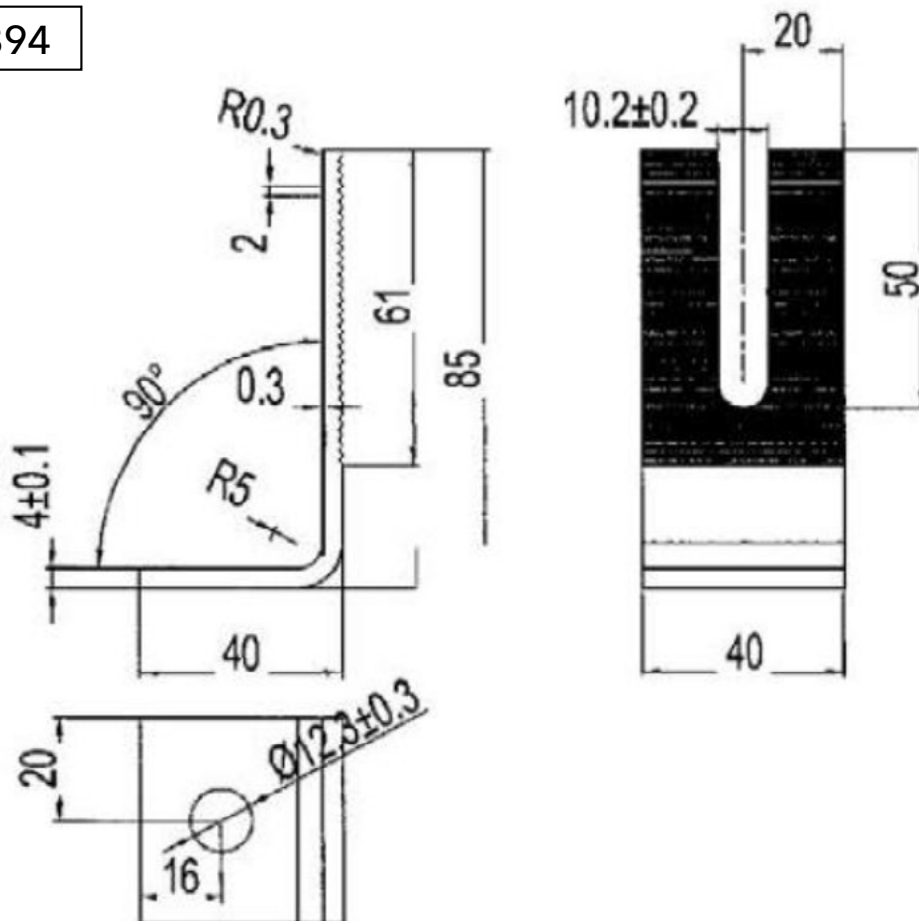

INSTALL INSTRUCTIONS



RECOMMENDED MATERIALS

- Rafter locator
- Chalk or a crayon
- Drill with a 3/16" drill bit
- M6 deep socket hex driver
- 1/2" wrench

INSTALLATION INSTRUCTIONS

1. Locate the rafter and predrill the hole
2. Place the screw with umbrella washer and drive until it compresses
3. Insert the L-Footer
4. Insert the nut and tighten until secure